



www.paddockspares.com

Seat Raiser

1. Remove seat base and locate the four mounting bolts that secure the seat frame to the seat box.
2. Remove these bolts and lift out the seat frame.
3. Mount the seat raisers on the original seat frame mounts. (See Fig. 1)
4. Then mount the seat frame onto the seat raiser using the new seat mounts (See Fig. 1) with the four bolts provided.
5. Once mounted, this will raise the seat by 30mm and set the seat backwards 70mm. (See Fig. 1)
6. To adjust the seat raisers, slacken bolts A (See Fig. 1) and lift the seat. This will raise the seat to a total height of 45mm (See Fig. 2)
7. To raise the seat at the front but low at the rear, first undo bolts A (See Fig. 1) and lift the front of the seat. Then tighten the bolts, leaving the rear of the seat frames in the down position.
8. To raise the rear and lower the front, undo the bolts A (See Fig. 1). Then lift the rear of the seat and tighten the bolts leaving the front in the downward position.

