

## Airspring Fitting Information

**ATTENTION: BEFORE FITTING THIS AIRSPRING PLEASE READ THIS SHEET FULLY. FAILURE TO COMPLY WITH ANY OF THESE GUIDELINES WILL INVALIDATE YOUR WARRANTY.**

### AIRSPRING INSTALLATION

---

The Airspring must be installed in accordance with the OEM instructions detailed in the workshop manual.

The Airspring must never be inflated prior to correct installation on the vehicle.

The Airspring is delivered in the "approximate installed height" condition and should not be extended, creased or folded for assembly as this could cause damage to the Airspring.

The axle or any other components must not be allowed to hang from the Airspring. The Airspring is designed to support only when installed correctly and inflated to the correct pressure.

### AIRSPRING REMOVAL

---

In the unlikely event of the Airspring failing, please remove the part very carefully, maintaining the parts original shape as much as possible.

If the part has failed due to foreign objects becoming embedded in the rubber or piston, please be advised that this falls outside of the warranty.

The return will also be declined if there is evidence of abrasion on the rubber sleeve. This is often caused by contact with an external part and the vehicle should be checked accordingly.

**In the event of a failure which you believe may be a warranty issue please contact your supplier to arrange for the return of the part.**