

The quality parts for Land Rovers

Part Number ANR3731

Compressor Fitting Information

ATTENTION: BEFORE FITTING THIS PART PLEASE READ THIS SHEET FULLY. FAILURE TO COMPLY WITH ANY OF THESE GUIDELINES WILL INVALIDATE YOUR WARRANTY.

Thank you for purchasing a Compressor assembly from Britpart.

In an effort to improve the warranty process of this part please take a moment to familiarise yourself with the information provided on this sheet.

REMOVING A COMPRESSOR

- 1. Depressurise system.
- 2. Remove cover from air supply unit.
- 3. Release compressor multiplug from casing and disconnect plug.
- 4. Remove three nuts and dished washers securing compressor. Take note of the orientation of the dished washers.
- 5. Remove compressor outlet pipe, seal exposed ends.
- 6. Remove compressor.

REFITTING NEW COMPRESSOR

- 1. Remove seals from air hose and compressor. Connect air hose to compressor and tighten union nut to 7 Nm.
- 2. Fit compressor ensuring correct orientation of dished washers. Tighten fixings to 2Nm.
- 3. Connect compressor multiplug, securing to casing.
- 4. Leak test connection.
- 5. Fit cover to air supply unit.

Please be advised that our supplier will always refuse warranty claims for compressor that have failed due to the below reasons.

INVESTIGATION

When replacing an compressor the fitter must first investigate the reason for the original compressor failure and ensure this has been rectified. Usually this is done by disconnecting the compressor from the system and checking it separately, but if this is done do not apply a voltage to the orange wire (thermal trip feed) and black wire (line feed) as this causes the trip to actually melt, rather than simply operate. At this point the pump will not run, however there is still a circuit between the green and black wires, so if plugged back into the vehicle circuit, the fault shows. Also if there is another fault on the system that causes the pump to run continuously it will burn out the thermal trim, again voiding any warranty.

**BEFORE THESE PARTS ARE SENT OUT FROM OUR SUPPLIER, THEY ARE 100% TESTED **

Britpart, The Grove, Craven Arms, Shropshire, SY7 8DA United Kingdom Tel: +44 (0) 1588 672711 Fax: +44 (0) 1588 672660

Email: sales@britpart.co.uk www.britpart.co.uk