


Fitting Instructions

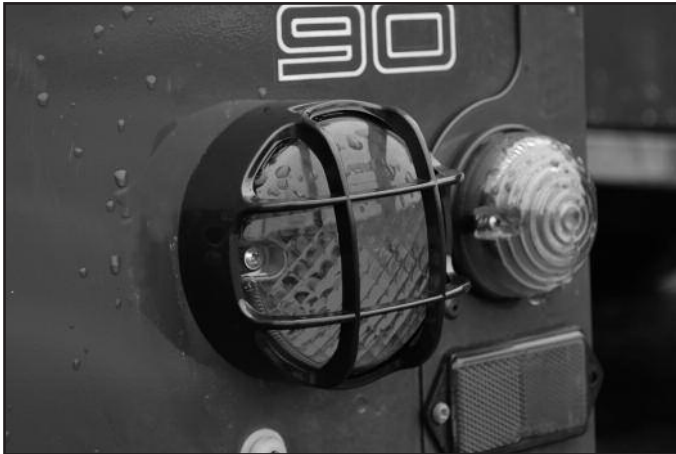

These guards will fit all of the 95mm diameter lights used on Defenders - fog, reverse and also NAS spec lights.

- > Look at the rear of the guard and find the 2 drain holes on the rear edge of the guard - these must be at the bottom when the guard is fitted to the vehicle.
- > On the inner edge you will see there are 3 gripping tabs at the 2 o'clock, 6 o'clock and 10 o'clock positions.
- > The tab at the 6 o'clock position fits into the drain hole at the bottom of the mounting base of your light and the other 2 tabs grip on the surface of the base.
- > Position the light guard over the rear light with the drain holes at the bottom and push the guard onto the rear light.
- > To remove the guard you need to pull (with some force) at the bottom of the light guard to release the lower tab.