
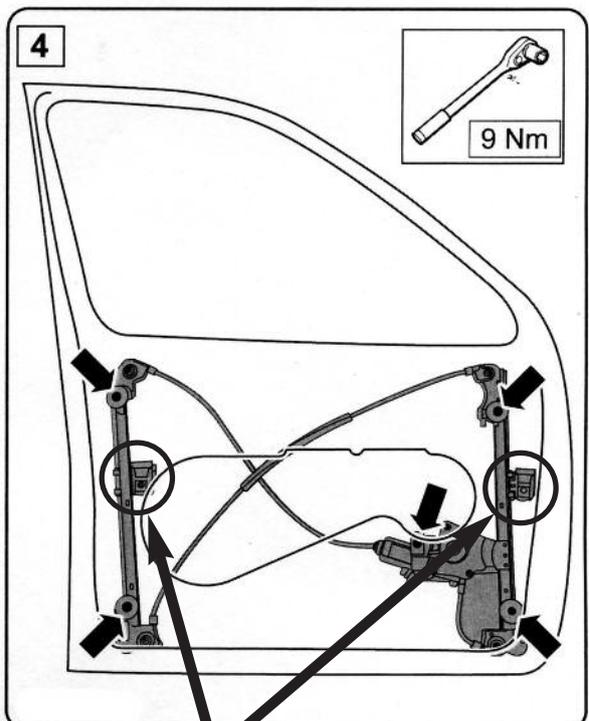
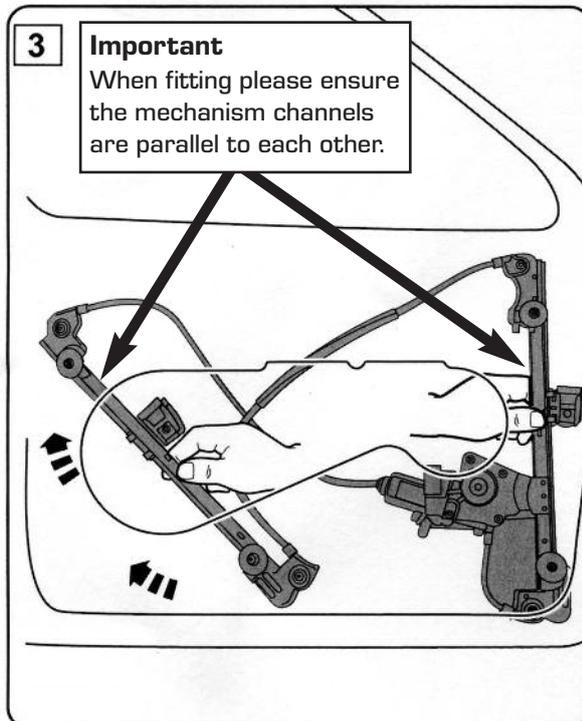
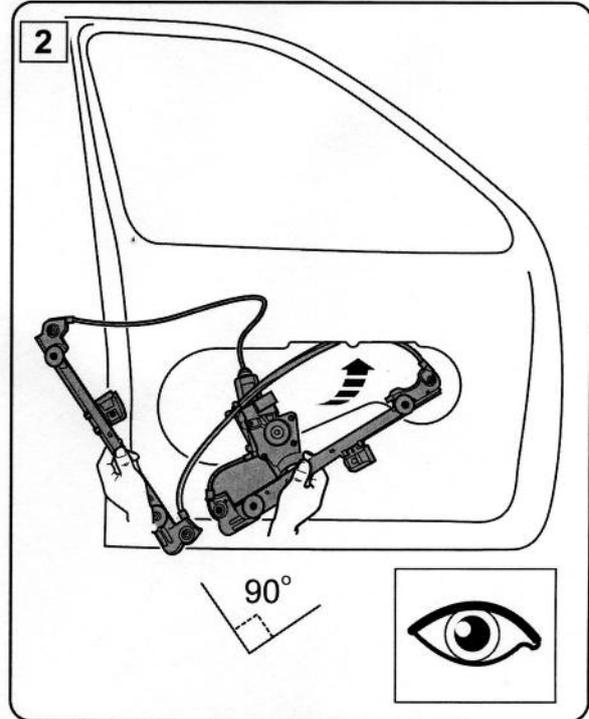


Fitting Instructions

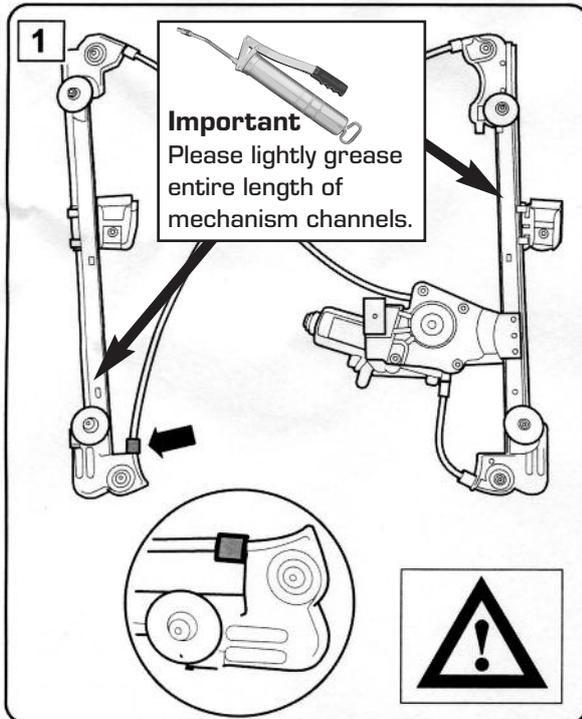

IMPORTANT NOTE - Window clamps to be tightened to 6Nm & locked in place with locking nut.