

FITTING INSTRUCTIONS


> Discovery

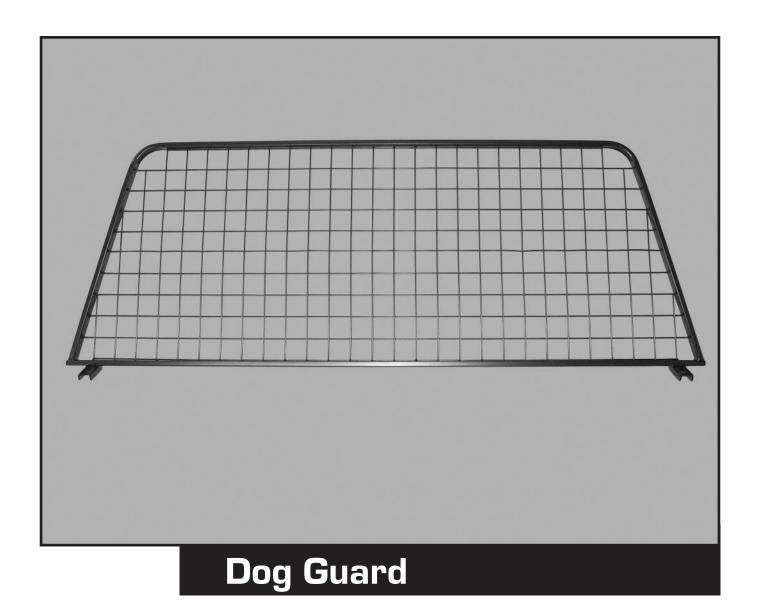


BRITPART


The quality parts for Land Rovers

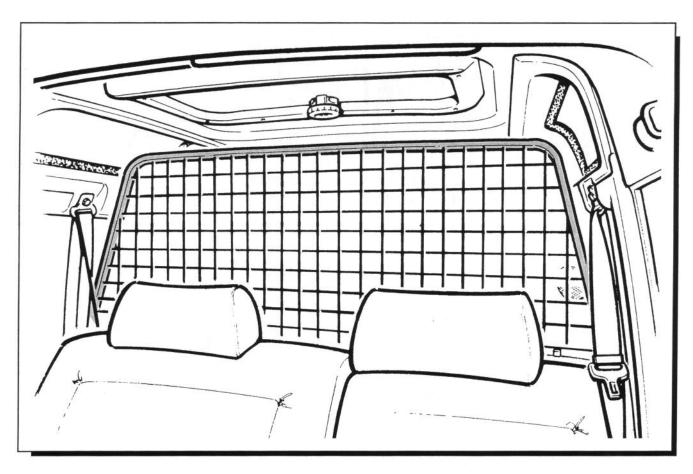


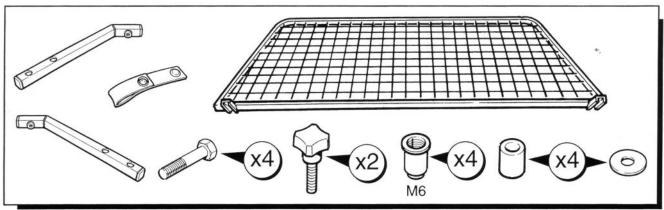


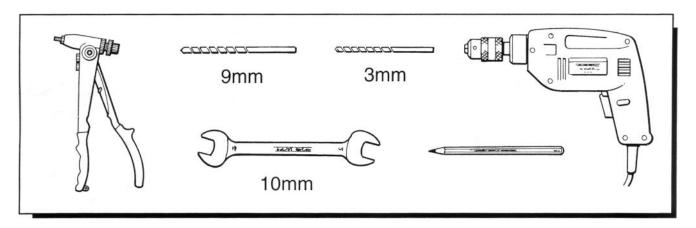



Discovery - Dog Guard

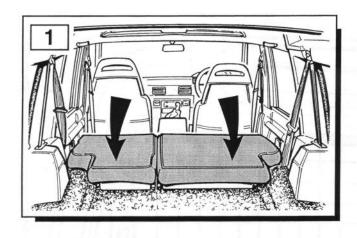


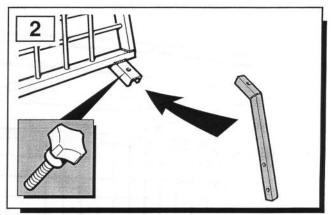


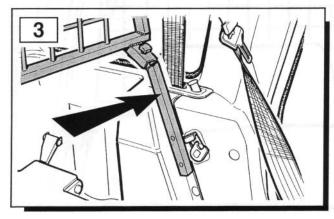


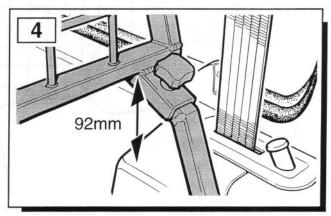

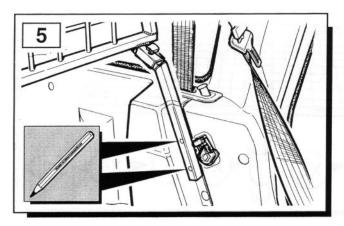


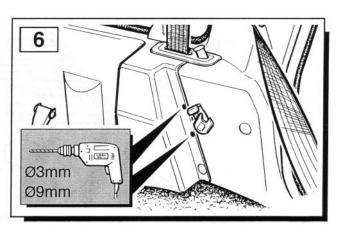


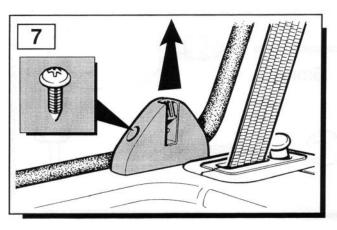


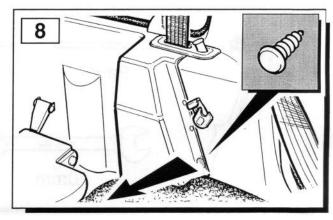



Discovery - Dog Guard

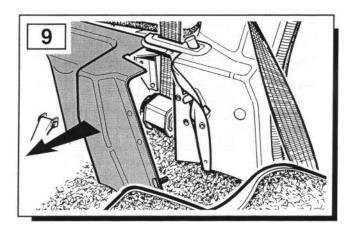


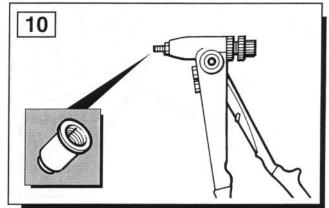


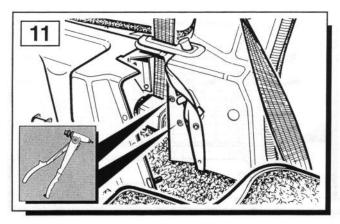


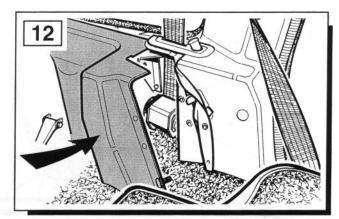

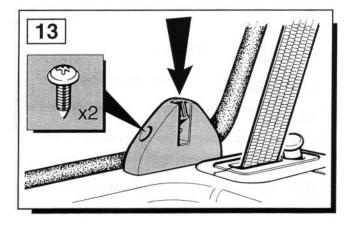


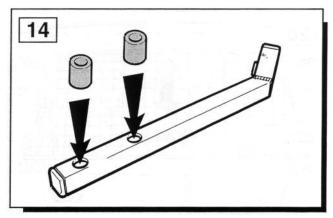


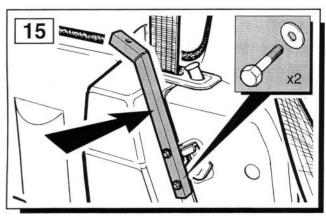


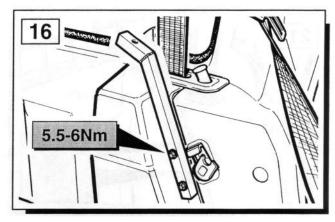



Discovery - Dog Guard

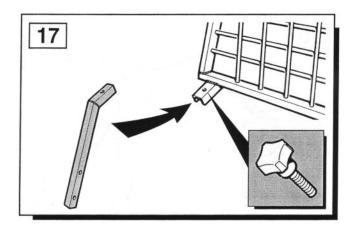

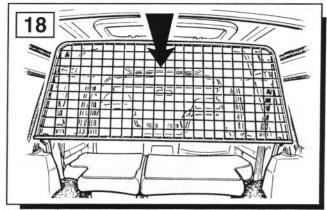


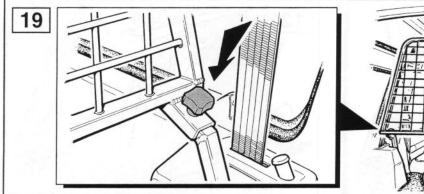

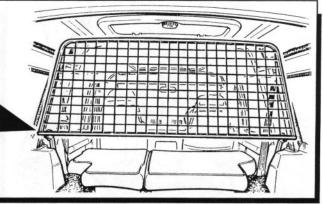

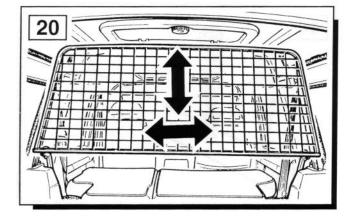



Installation for right hand side is the same as the left hand side.

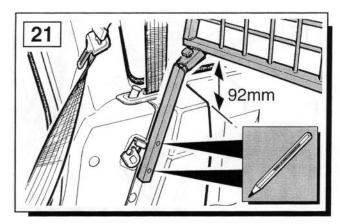





If loadspace blind is fitted follow instructions 22-24

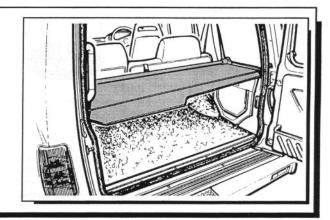

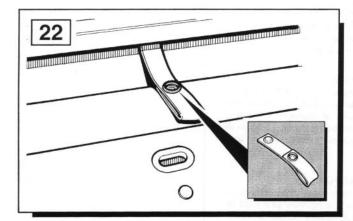

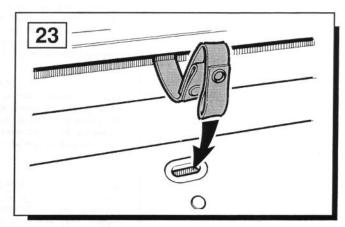

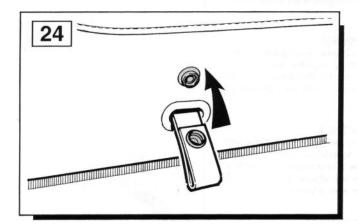

WARNING

Accessories which are not properly fitted can be dangerous.

Read the instructions carefully prior to fitting.

Whilst fitting, comply with the instructions at all times.