FITTING INSTRUCTIONS


> Defender 90 & 110





Rear Step Bumper


BRITPART


The quality parts for Land Rovers

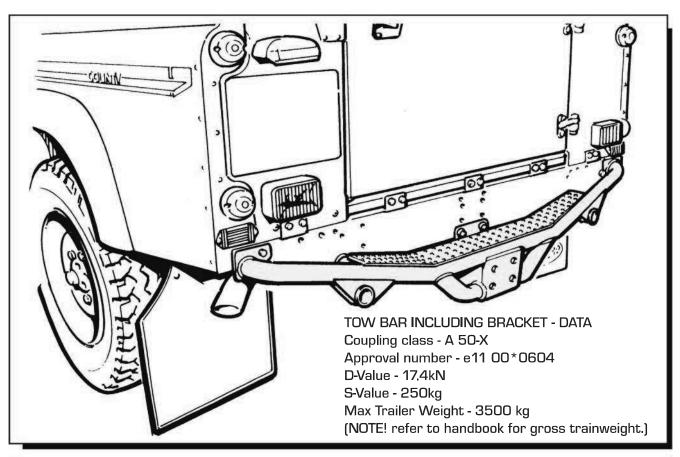


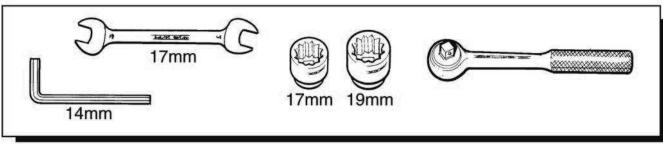


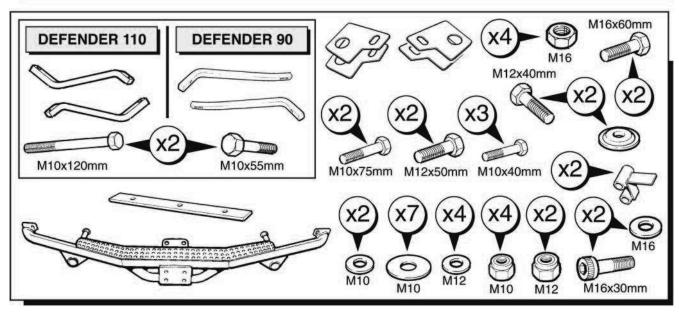


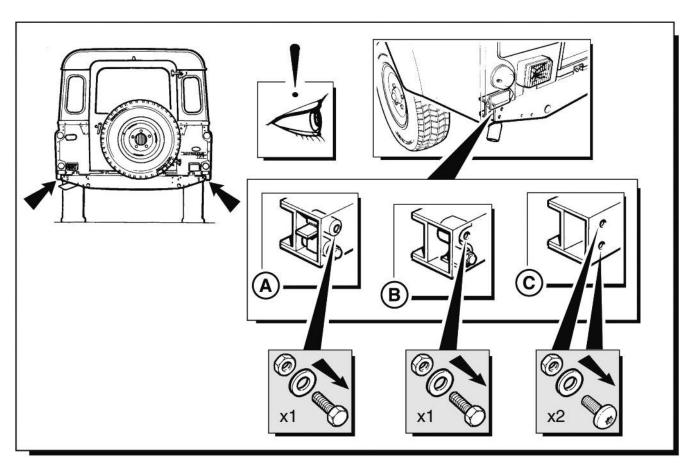


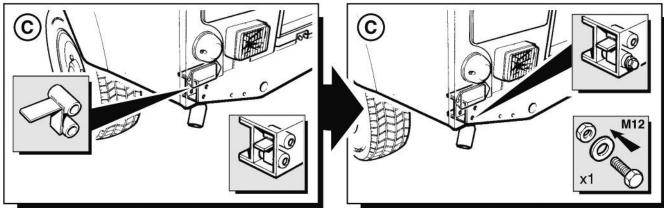


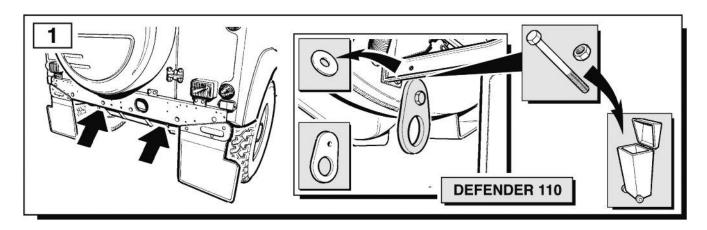


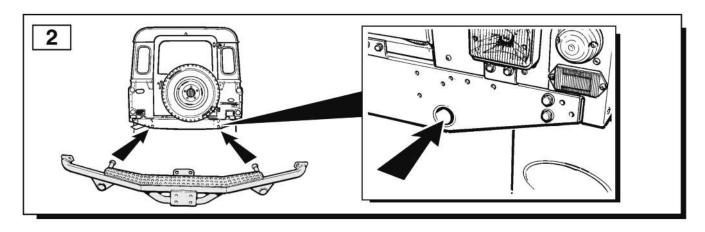


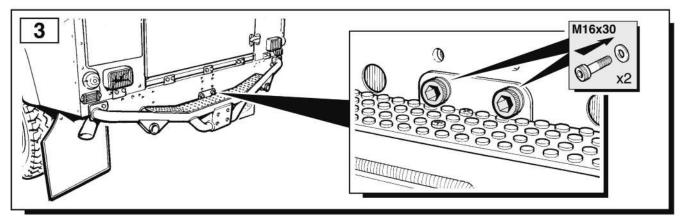


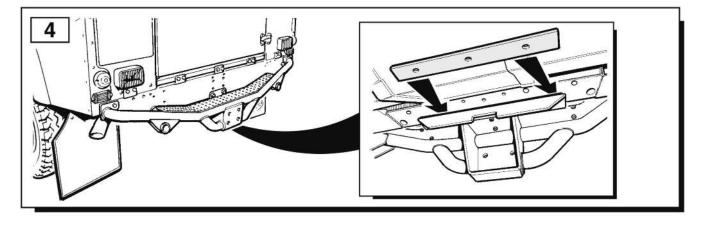


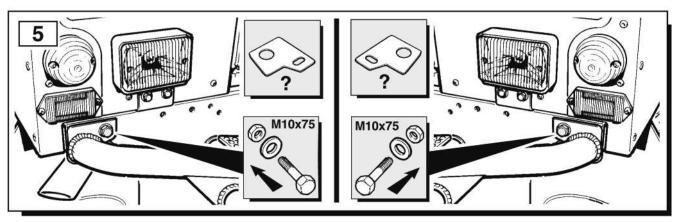


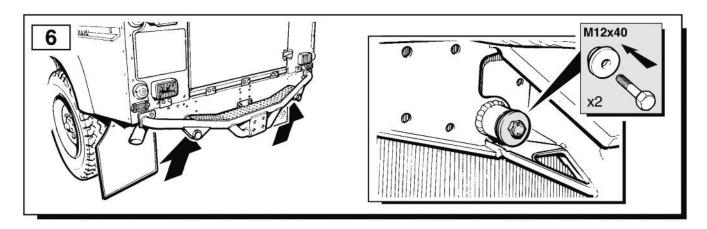


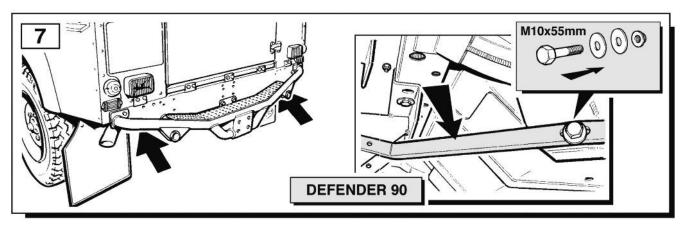


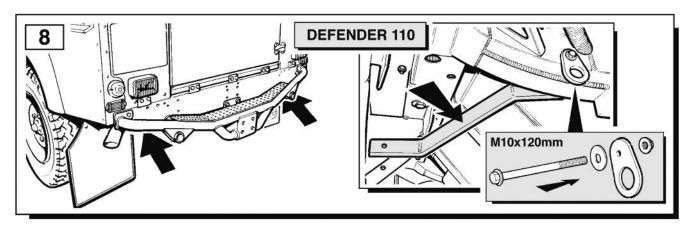


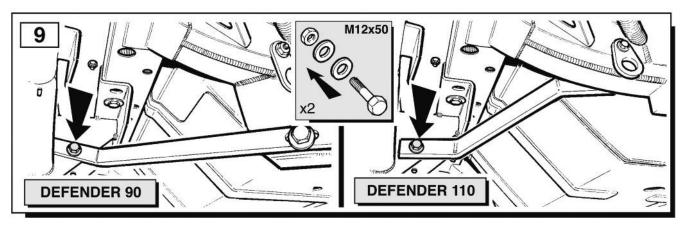


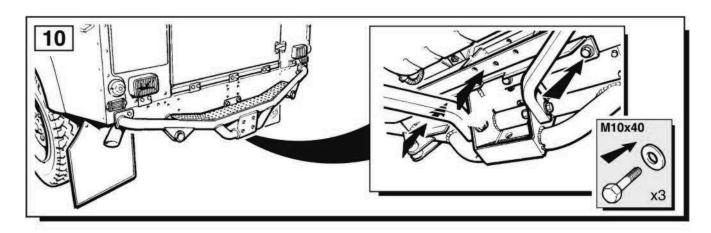


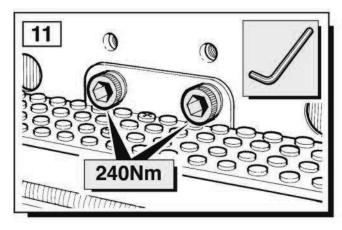


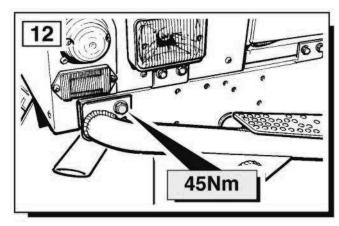

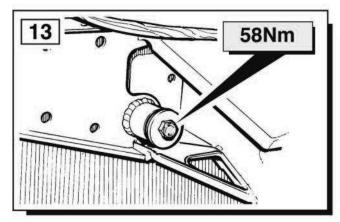

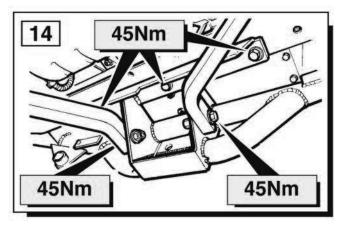

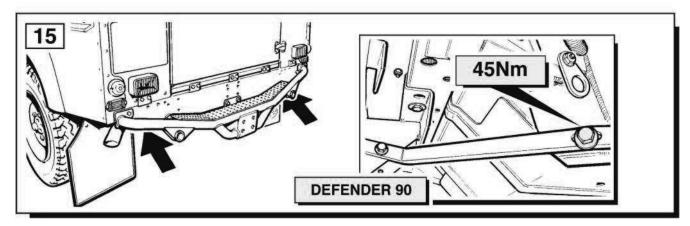

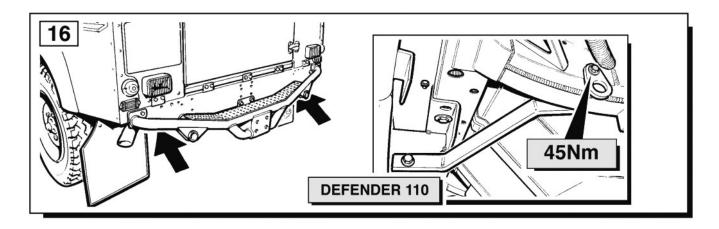

WARNING

Accessories which are not properly fitted can be dangerous.

Read the instructions carefully prior to fitting.

Whilst fitting, comply with the instructions at all times.