


HICLONE FITTING INSTRUCTIONS FOR LAND ROVER ENGINES


SERIES 1, 2 AND 2A DIESEL LAND ROVER

PART NUMBER - DA3119

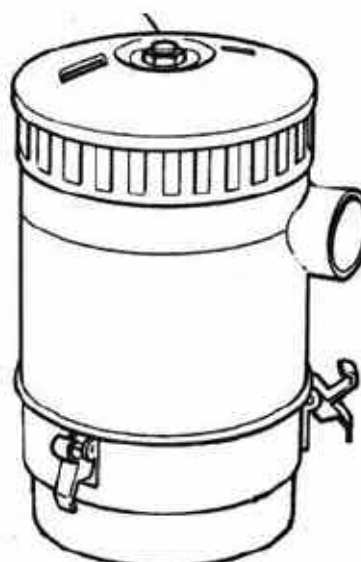

Air Cleaner

- 1** Locate flexible hose that connects air cleaner to manifold.

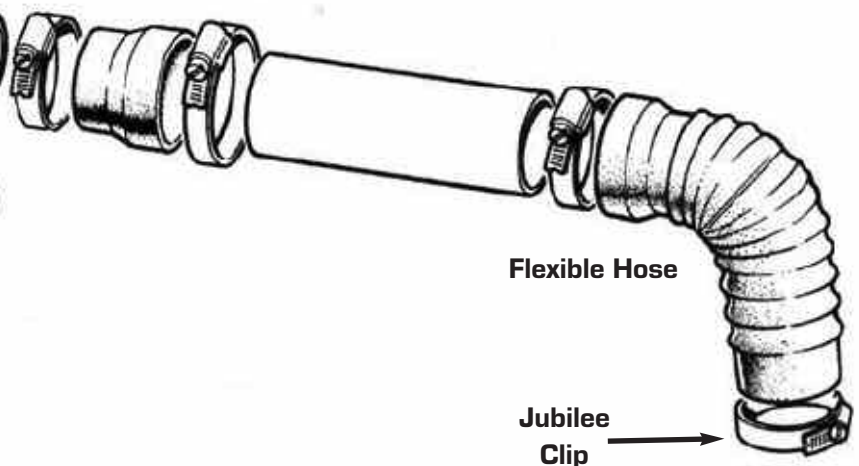

Flexible Hose

**Jubilee
Clip**

Manifold

- 2** Undo jubilee clip holding hose to manifold.

- 3** Insert Hiclone in manifold so it fits tight and snug and flush with the manifold. Do up the clip.



Hiclone

IMPORTANT - Please read before fitting!

Be careful as Hiclone may have sharp edges. Always wear gloves and keep away from children!

Hiclone is labelled with an arrow and should be fitted so that the arrow points in the same direction as the air flows towards the engine. Fit it tight and snug so that it does not move and the fins meet in the middle. If it does not fit properly, check the condition of the hose and renew it if necessary. If Hiclone is fitted loose it will not work to its full capacity.

BRITPART

The quality parts for Land Rovers

