

## Bush Removal


### WARNING

**NEVER** burn bushes out!  
There is a danger that the rubber may explode!



#### Step 1

Drill around the bush inner sleeve to remove as much rubber as possible. Turn over and repeat the process.

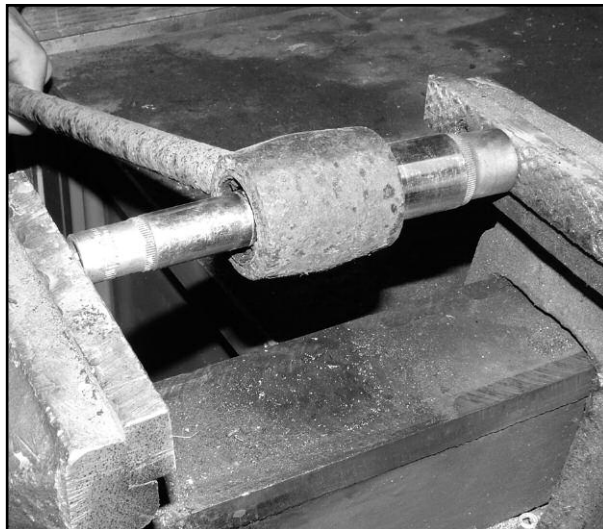

#### Step 2

Use a vice and two sockets to wind the bush centre sleeve through, any remaining rubber will tear.



#### Step 3

Use a hacksaw to saw through the outer sleeve.



#### Step 4


Tap out the outer sleeve with a chisel.

Turnover for new bush fitting tips.....

# Bush Fitting

## INFORMATION

For fitment of all new polyurethane bushes that are in two halves with one internal sleeve.

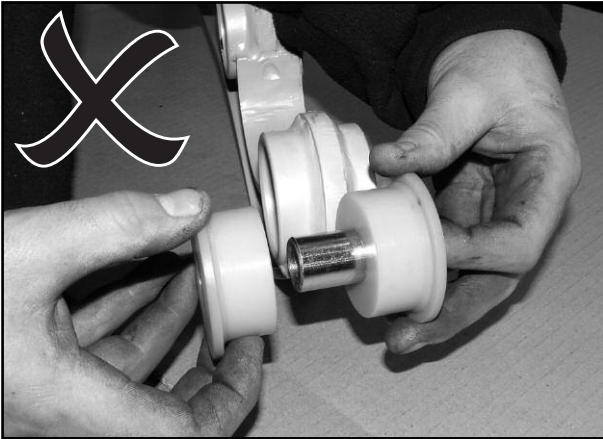

### Note

Be careful not to create an air pocket during assembly, the air will just keep popping the second half out as soon as pressure is removed.

Do not start with the sleeve all the way through one half.



### Step 1

Push one half of the bush into the bore.



### Step 2

Push sleeve into the first half so that it doesn't go through the other side of the bush.



### Step 3

Push in second half of the bush.



### Step 4

Push sleeve through to second half.

Turnover for old bush removal tips.....